



© Copyright 2018


# RWM Inc.


6419 South Cottonwood Street, Murray, Utah 84107  
 Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)  
 Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at [www.rwm-inc.com](http://www.rwm-inc.com)

## 21" Round Recessed Dome 1 Part with an $8\frac{3}{8}$ " Overall Rise

Bottom of  $\frac{1}{2}$ " thick mounting flange should be installed flush with the bottom of your ceiling drywall.

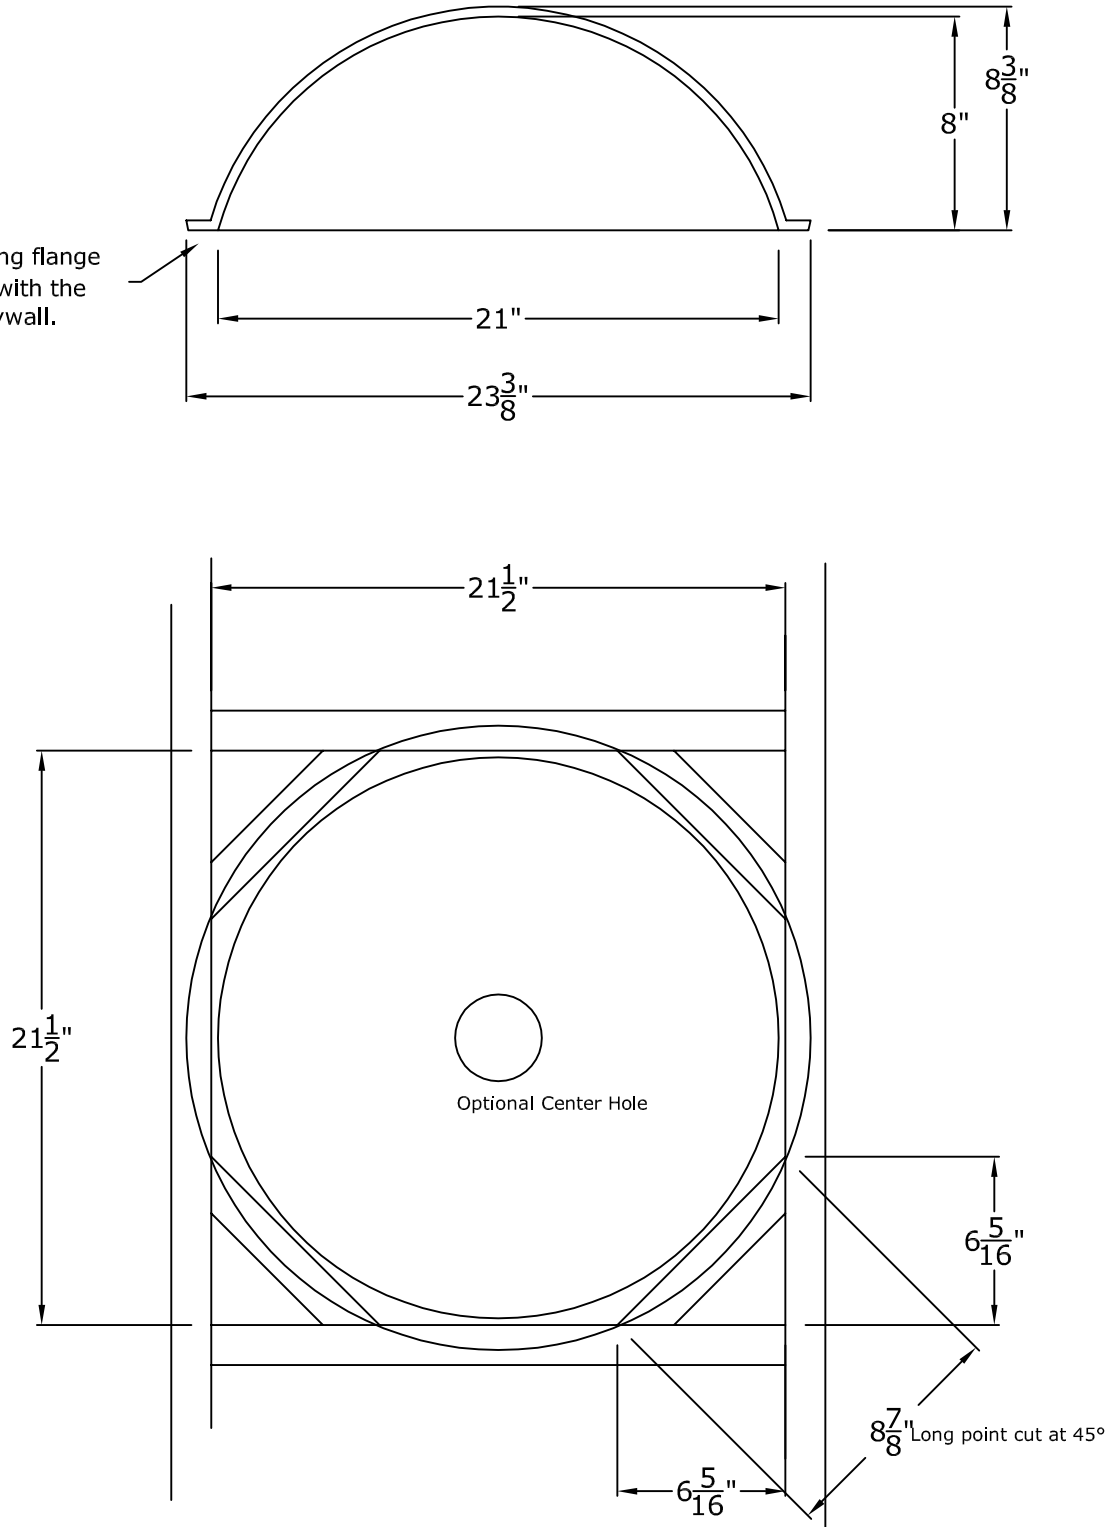

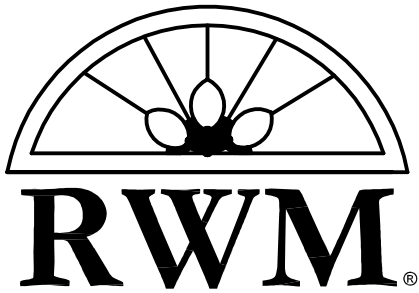



© Copyright 2018


# RWM Inc.

6419 South Cottonwood Street, Murray, Utah 84107  
Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)  
Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at [www.rwm-inc.com](http://www.rwm-inc.com)

## Traditional Lightcover for Mini Domes

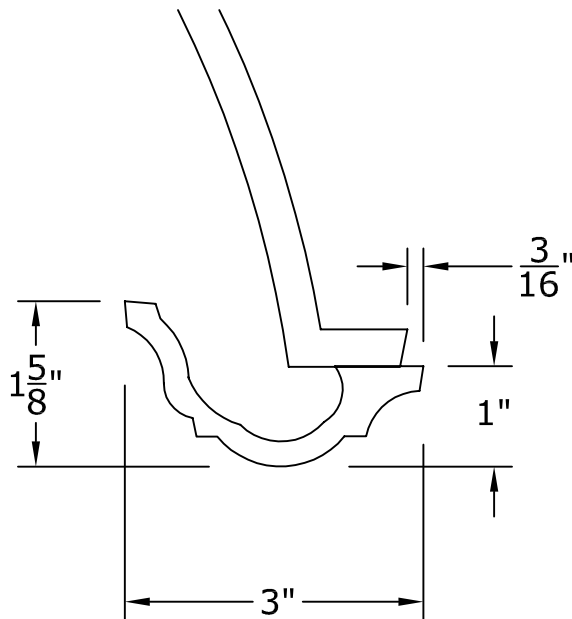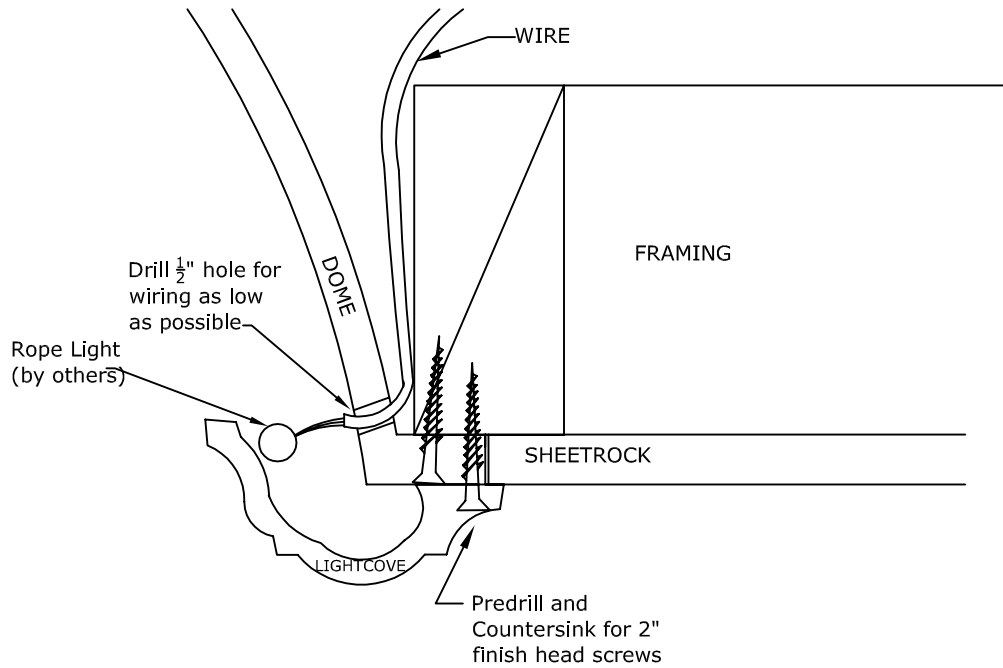

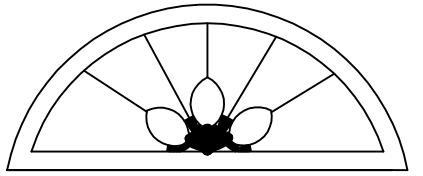

**RWM**®

© Copyright 2018

## RWM Inc.


6419 South Cottonwood Street, Murray, Utah 84107

Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)


Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at [www.rwm-inc.com](http://www.rwm-inc.com)


### Standard Casing Profiles: Smaller than 3' Domes

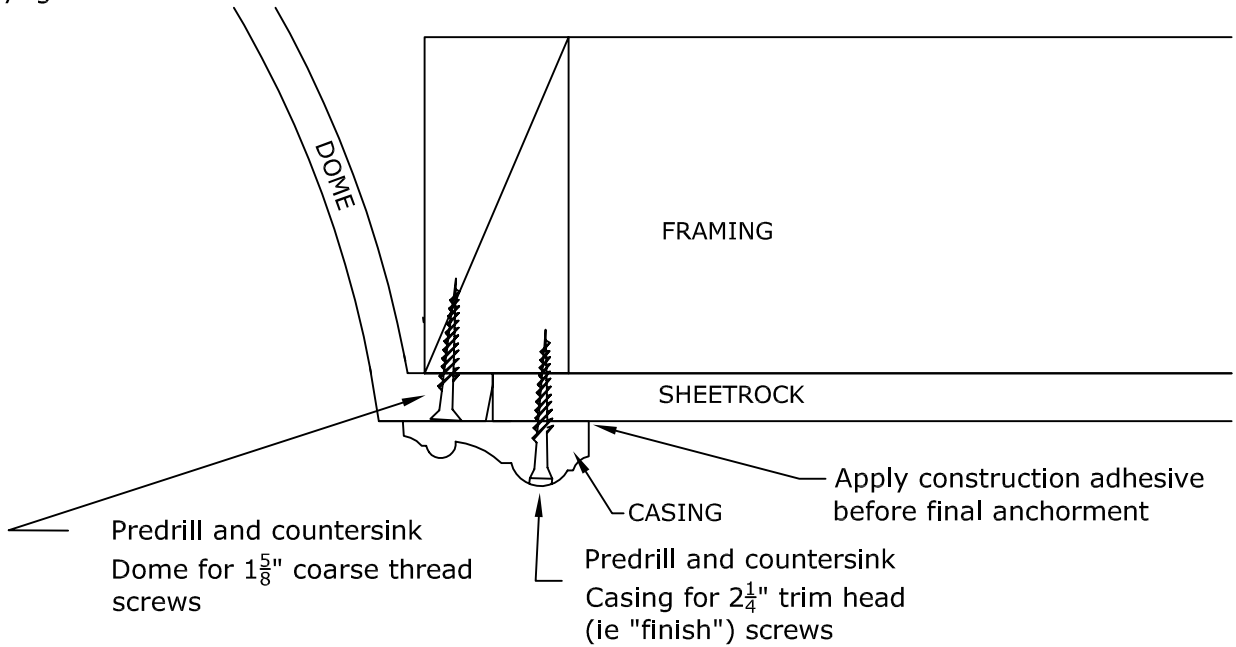

Profile A

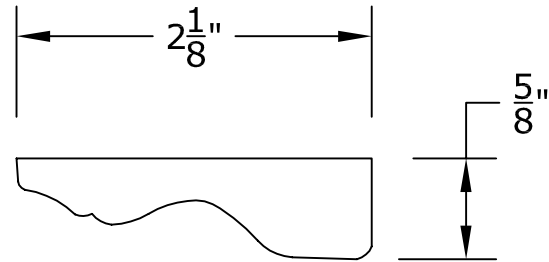

Profile B

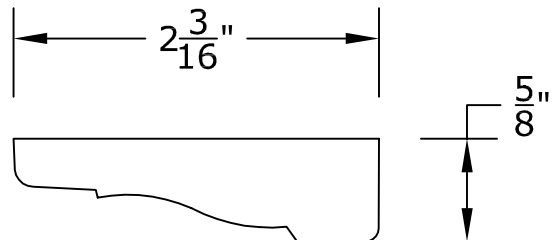

Profile C

