

RWM®




© Copyright 2018

RWM Inc.

6419 South Cottonwood Street, Murray, Utah 84107
Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)
Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at www.rwm-inc.com

31 $\frac{5}{8}$ " Round Recessed Dome: 1 Part with a 15" Overall Rise

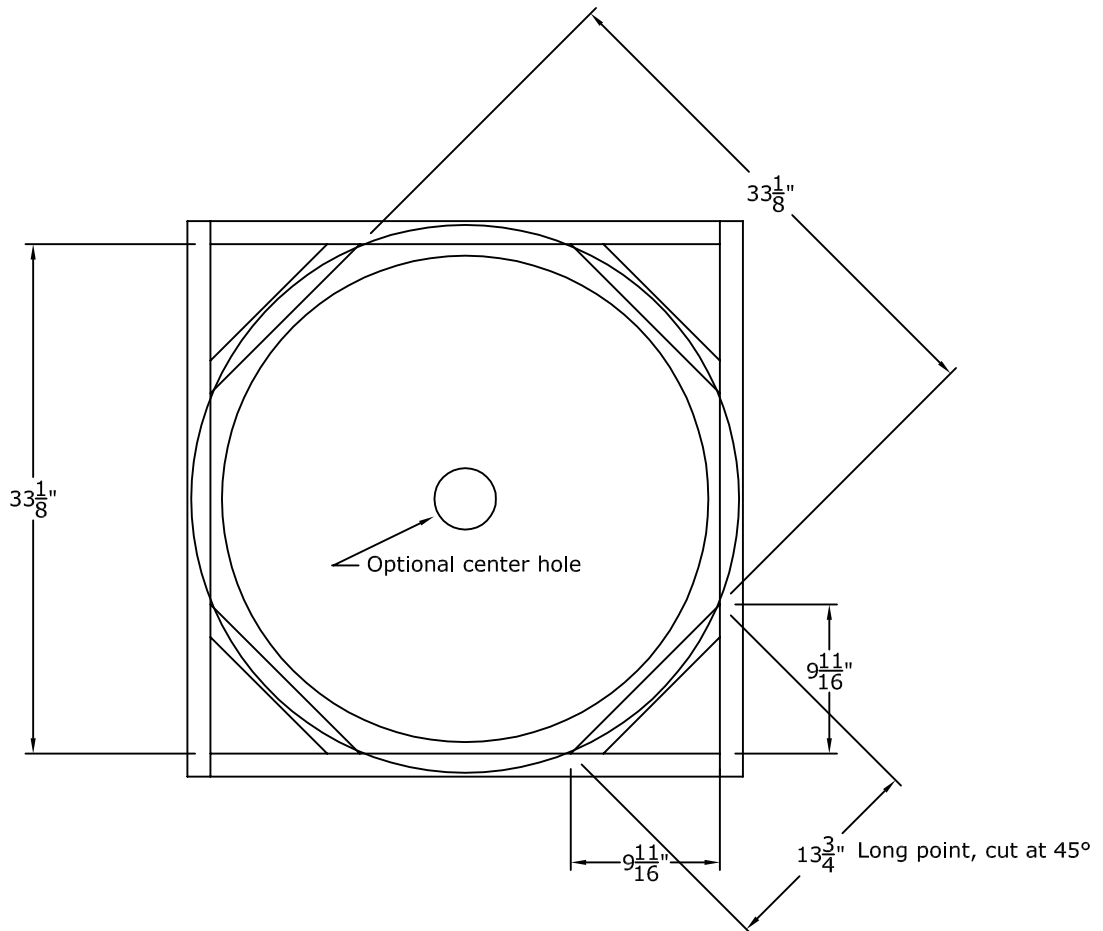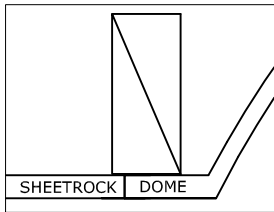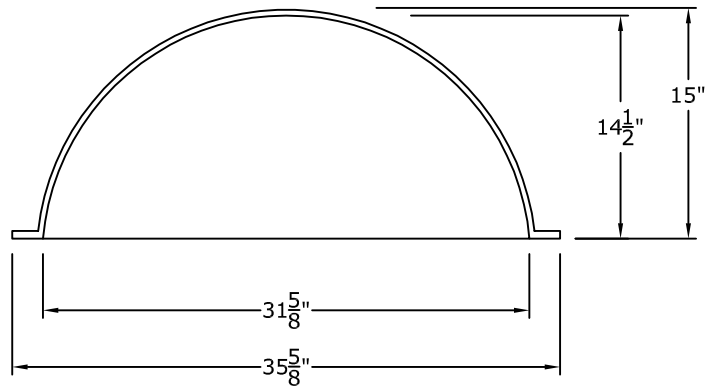





RWM Inc.

6419 South Cottonwood Street, Murray, Utah 84107
 Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)
 Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at www.rwm-inc.com

Traditional Lightcover: For Select Smaller Domes

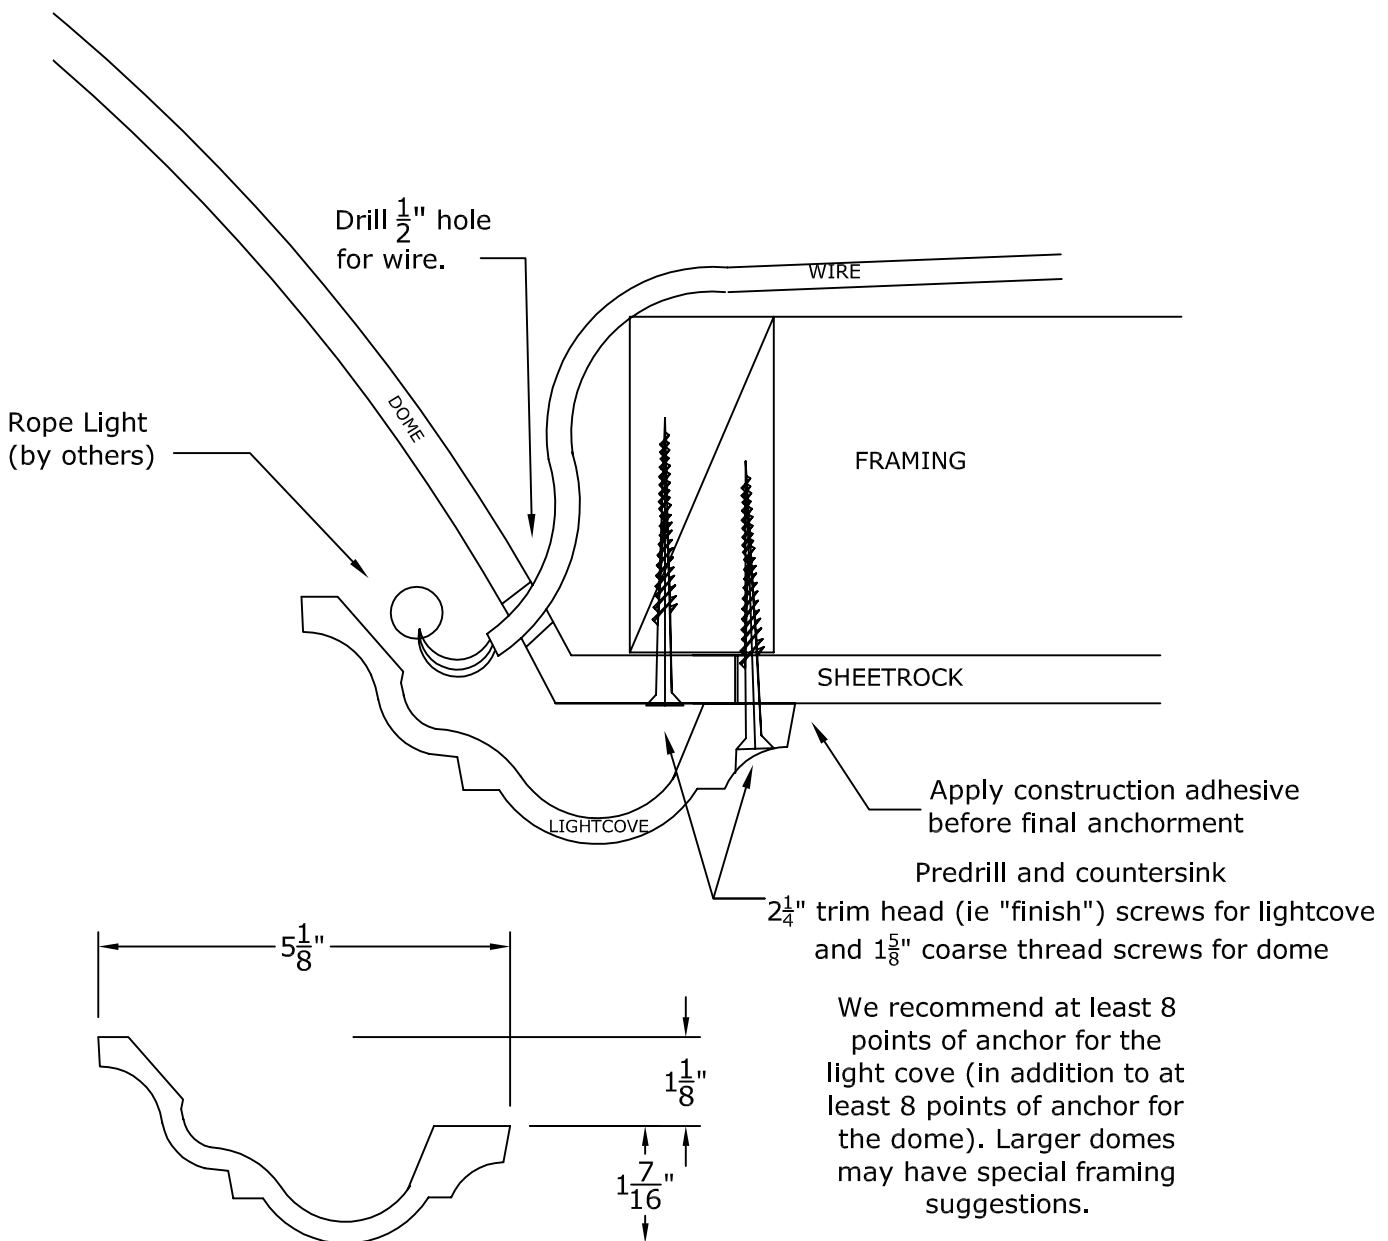

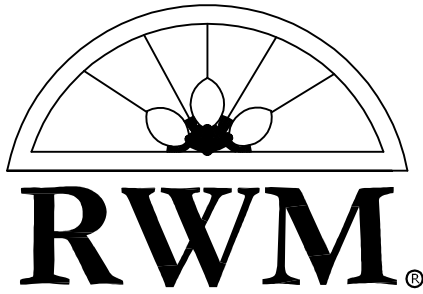


© Copyright 2018

RWM Inc.


6419 South Cottonwood Street, Murray, Utah 84107
 Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)
 Fax: 801-268-2522 E-mail: info@rwm-inc.com


Visit our website at www.rwm-inc.com

Contemporary Lightcover: For Select Smaller Domes

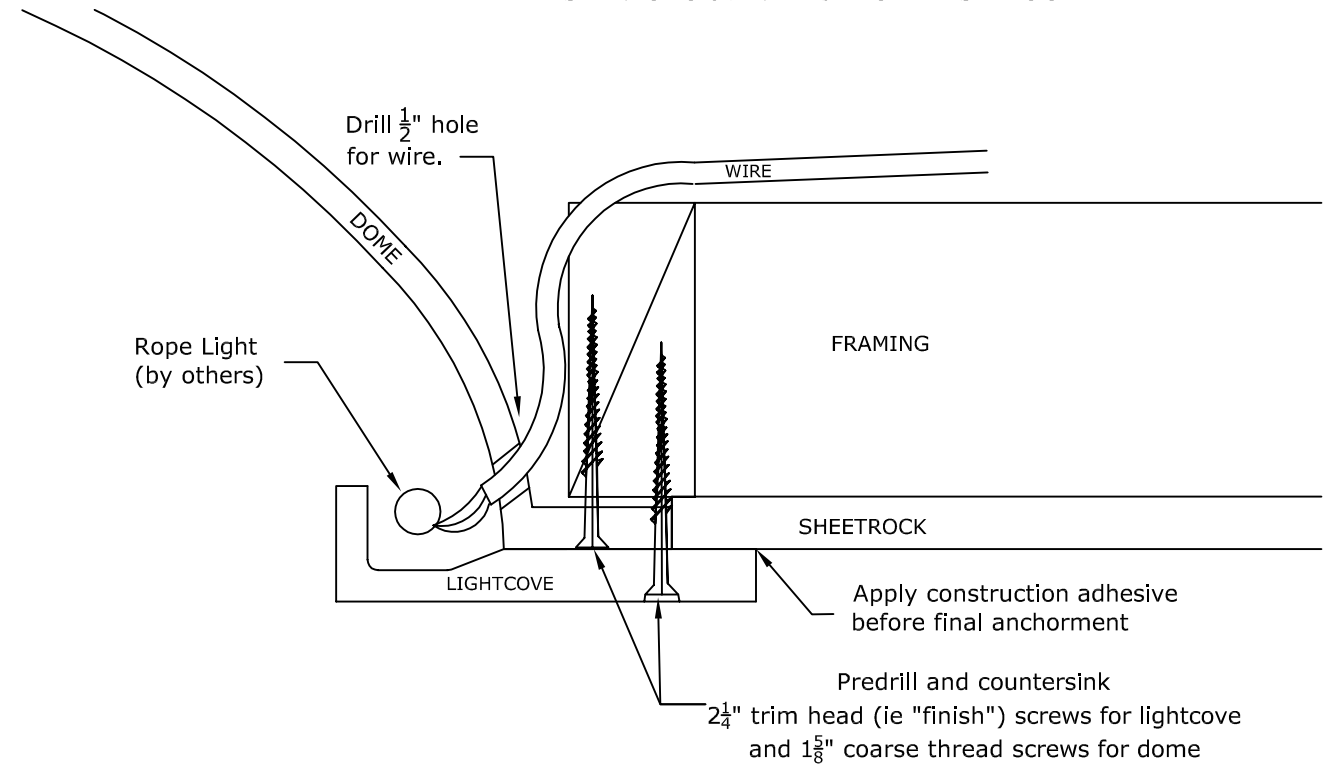

We recommend at least 8 points of anchor for the light cover (in addition to at least 8 points of anchor for the dome). Larger domes may have special framing suggestions.

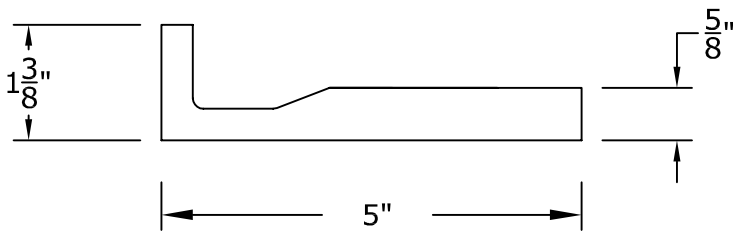

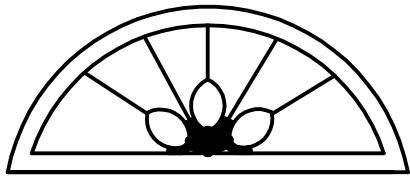

RWM®


© Copyright 2018

RWM Inc.


6419 South Cottonwood Street, Murray, Utah 84107
Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)
Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at www.rwm-inc.com


Standard Casing Profiles: For Select Domes

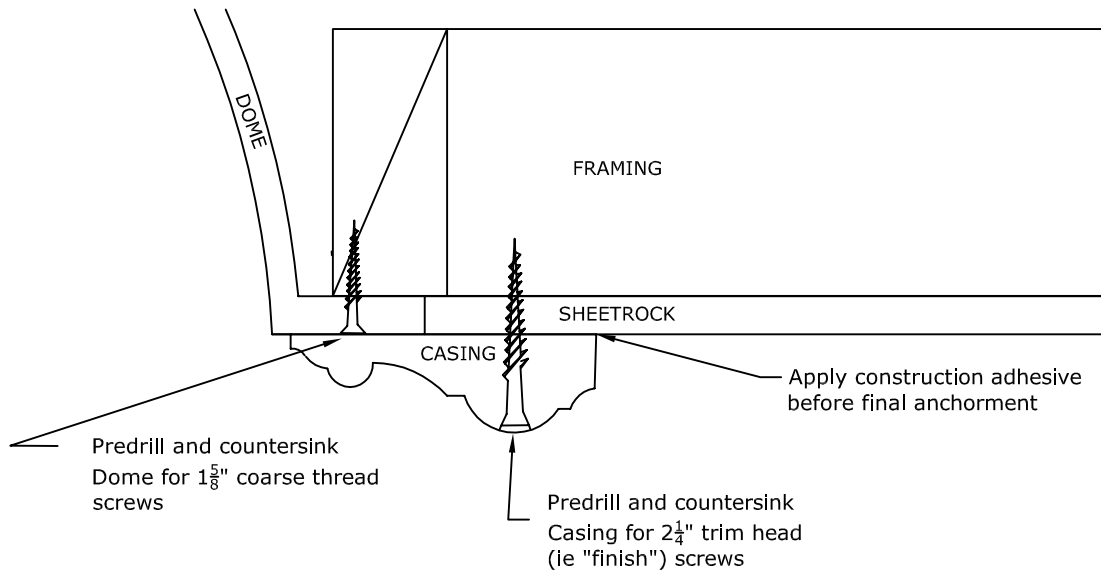


Profile 1

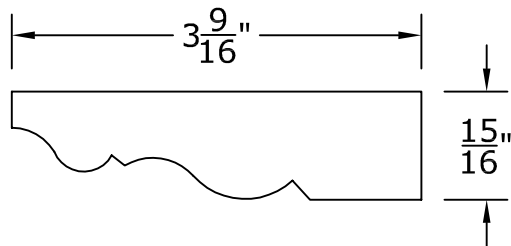

Profile 3

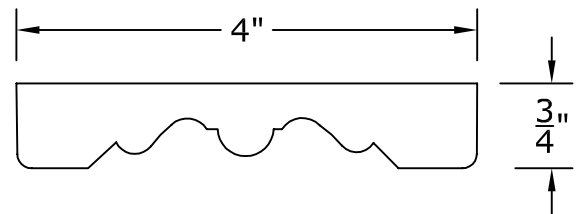

Profile 2

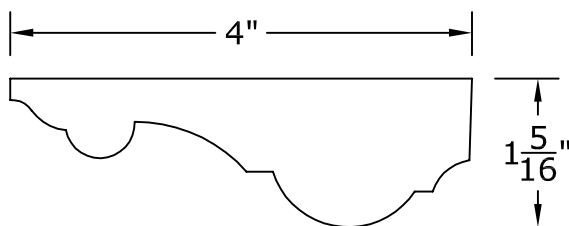

Profile 4

