

**RWM**<sup>®</sup>

© Copyright 2016

## RWM Inc.


6419 South Cottonwood Street, Murray, Utah 84107


Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)

Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at [www.rwm-inc.com](http://www.rwm-inc.com)

### 3 Foot Round Recessed Dome: 1 Part with a 6½" Overall Rise

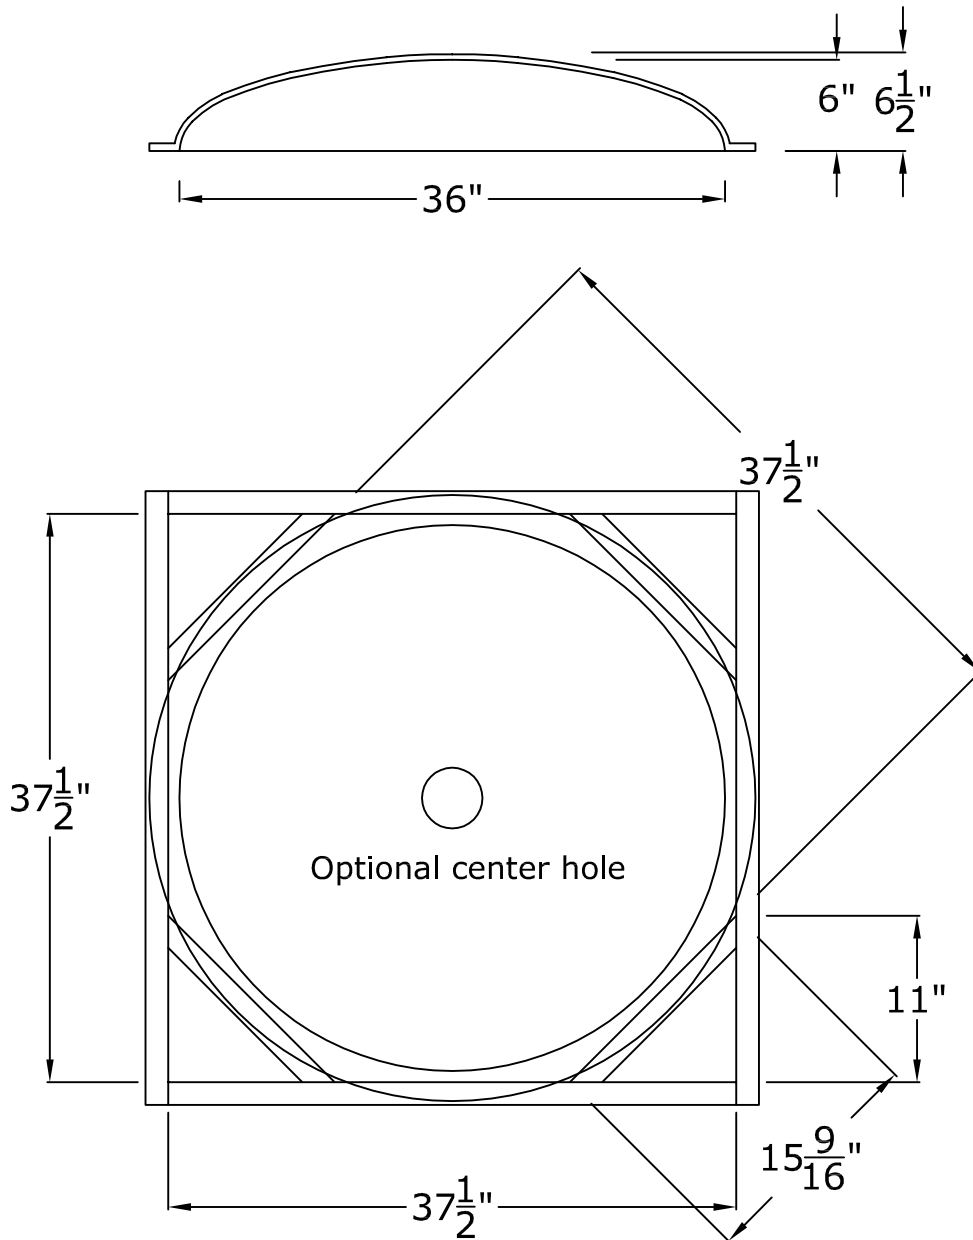

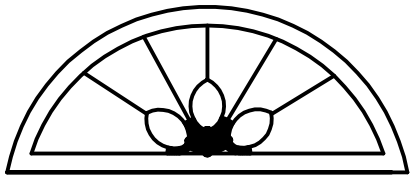

**RWM**<sup>®</sup>

© Copyright 2016

## RWM Inc.



6419 South Cottonwood Street, Murray, Utah 84107

Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)

Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at [www.rwm-inc.com](http://www.rwm-inc.com)

### 3 Foot Round Recessed Dome: 1 Part with a 9 $\frac{1}{2}$ " Overall Rise

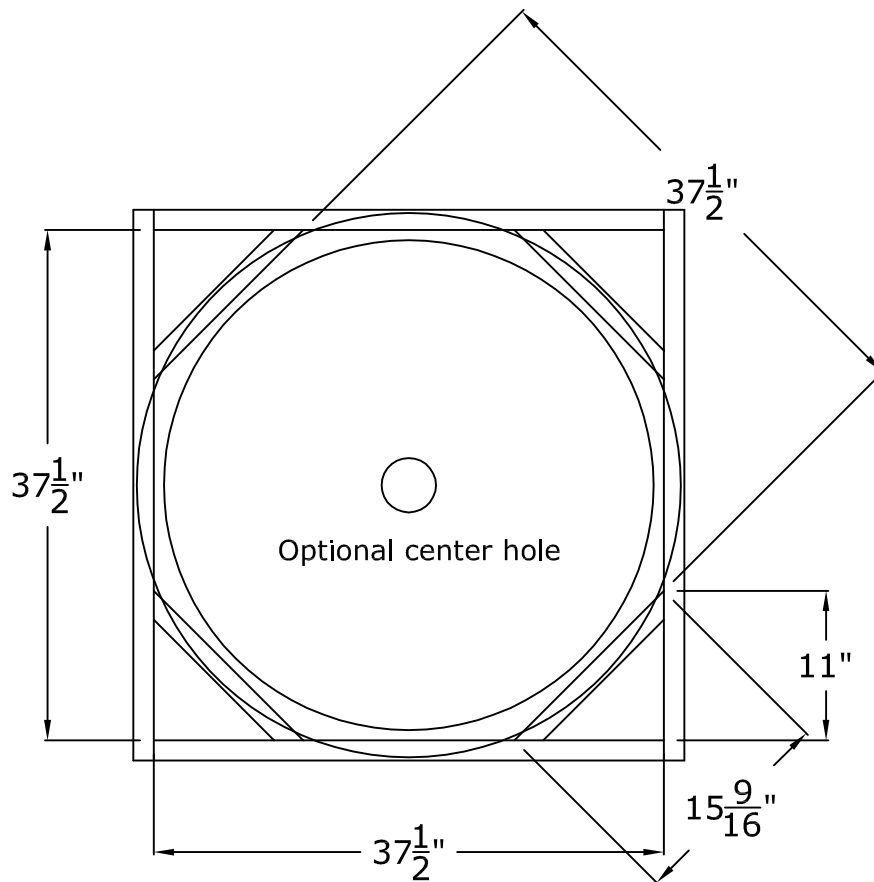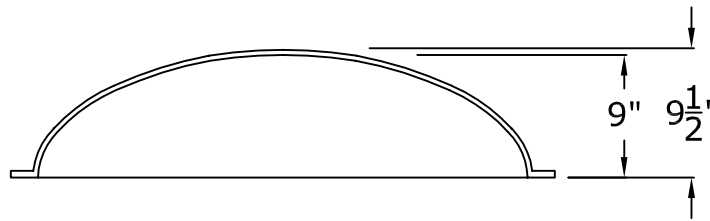





# RWM Inc.

6419 South Cottonwood Street, Murray, Utah 84107  
 Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)  
 Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at [www.rwm-inc.com](http://www.rwm-inc.com)

## Traditional Lightcover: For Select Smaller Domes

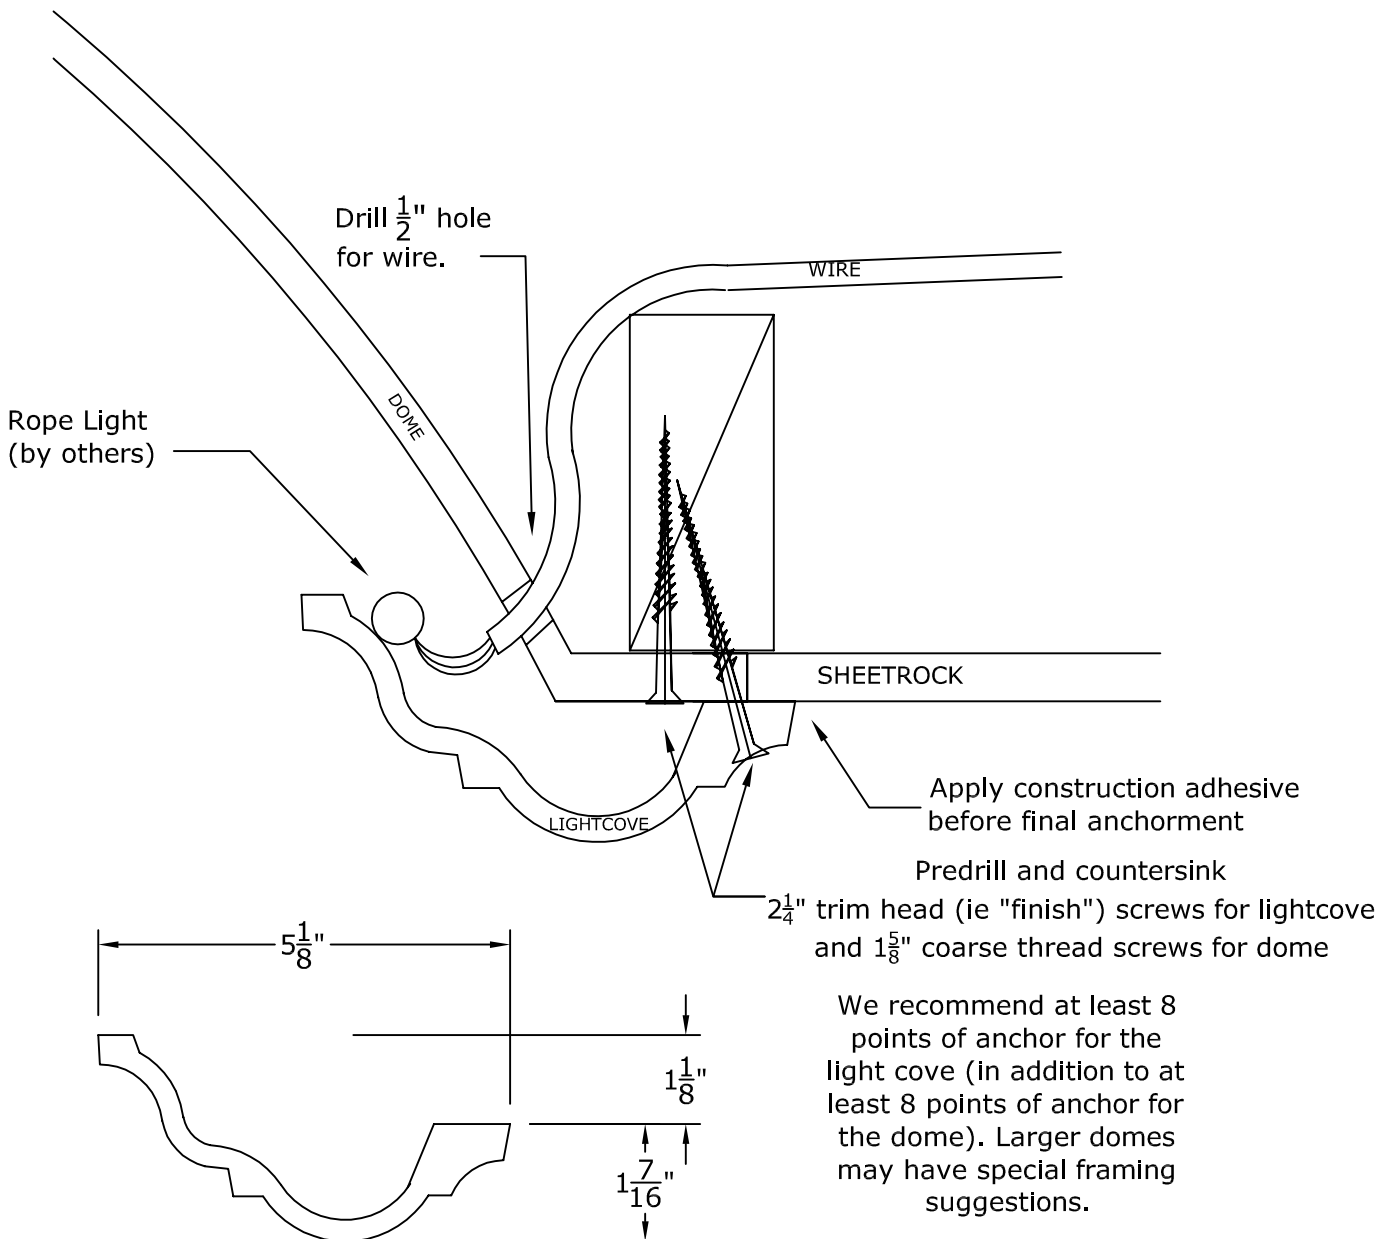

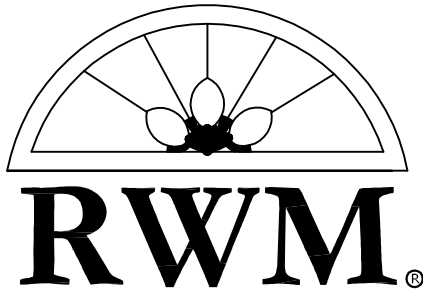


© Copyright 2017

# RWM Inc.


6419 South Cottonwood Street, Murray, Utah 84107  
 Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)  
 Fax: 801-268-2522 E-mail: info@rwm-inc.com


Visit our website at [www.rwm-inc.com](http://www.rwm-inc.com)

## Contemporary Lightcover: For Select Smaller Domes

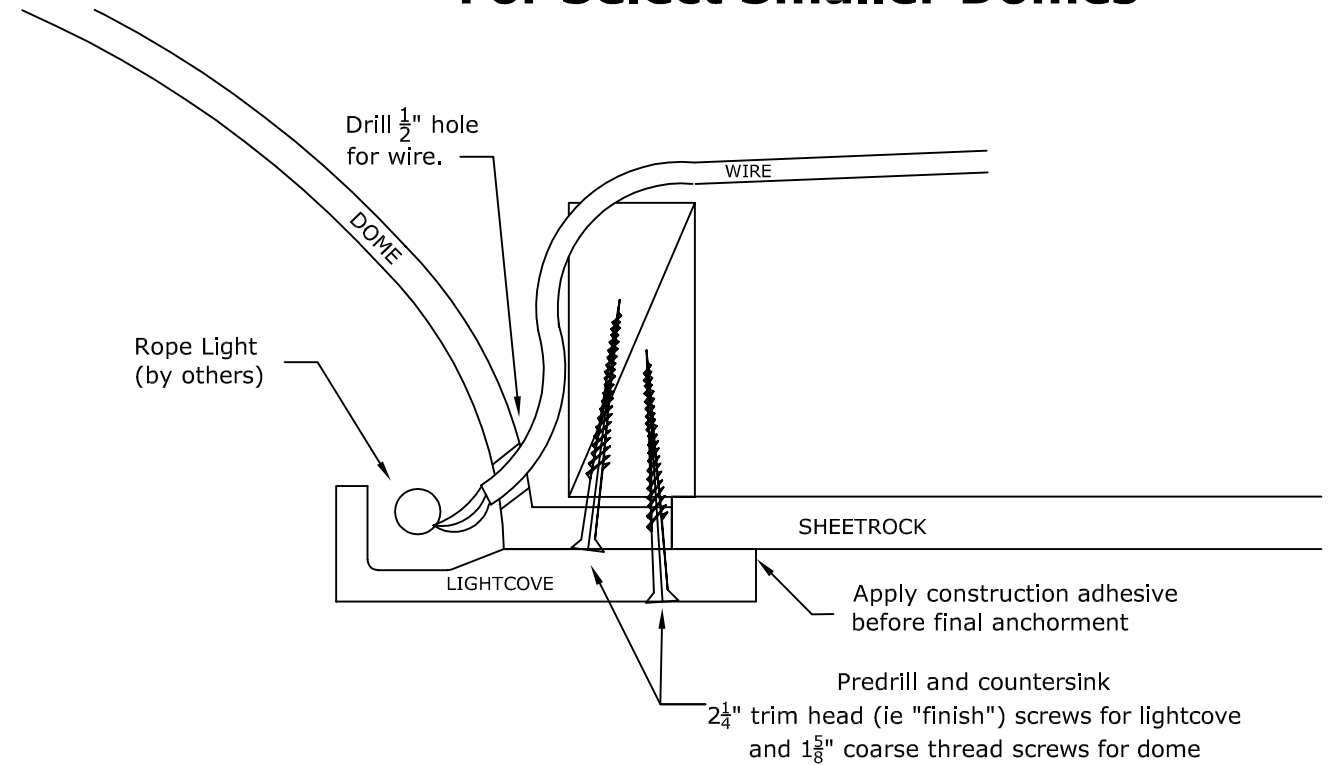

We recommend at least 8 points of anchor for the light cover (in addition to at least 8 points of anchor for the dome). Larger domes may have special framing suggestions.

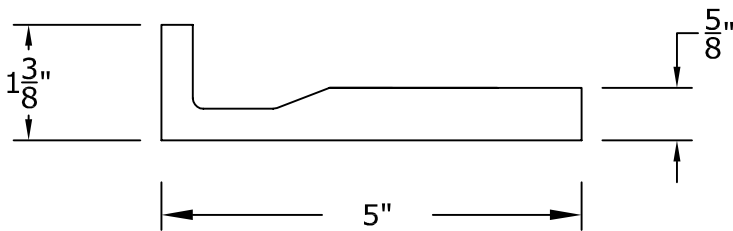

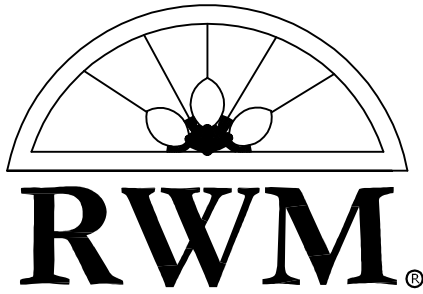


© Copyright 2017

## RWM Inc.


6419 South Cottonwood Street, Murray, Utah 84107  
 Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)  
 Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at [www.rwm-inc.com](http://www.rwm-inc.com)

## Bullnose Lightcover: For Select Smaller Domes

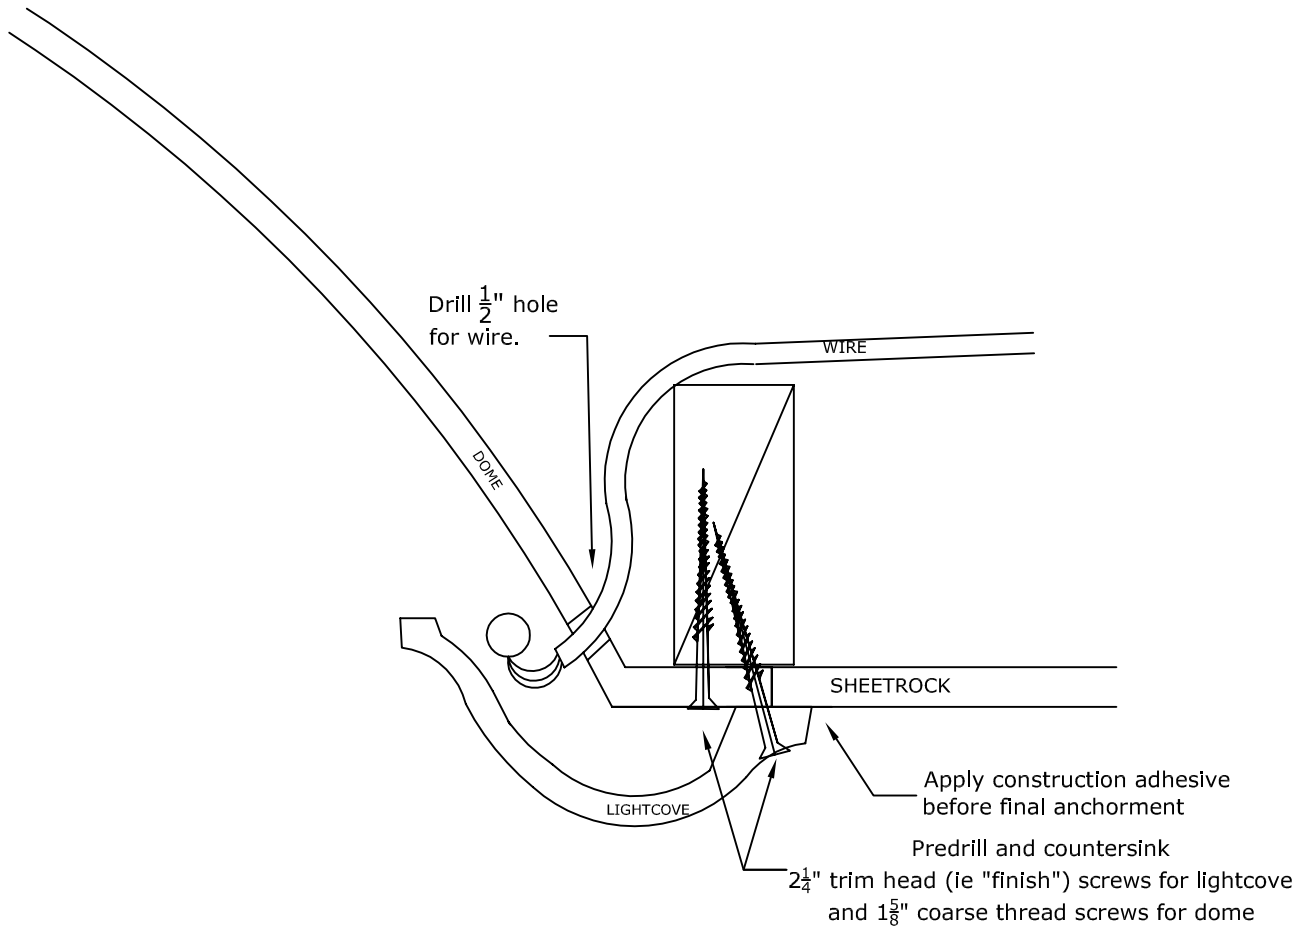

We recommend at least 8 points of anchor for the light cover (in addition to at least 8 points of anchor for the dome). Larger domes may have special framing suggestions.

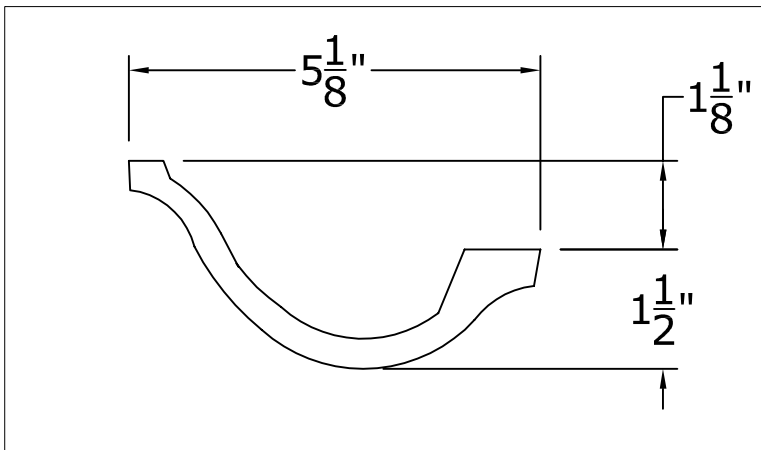




© Copyright 2017

# RWM Inc.


6419 South Cottonwood Street, Murray, Utah 84107  
 Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)  
 Fax: 801-268-2522 E-mail: info@rwm-inc.com


Visit our website at [www.rwm-inc.com](http://www.rwm-inc.com)

## Acanthus Leaf & Pearl Lightcover: For Select Domes

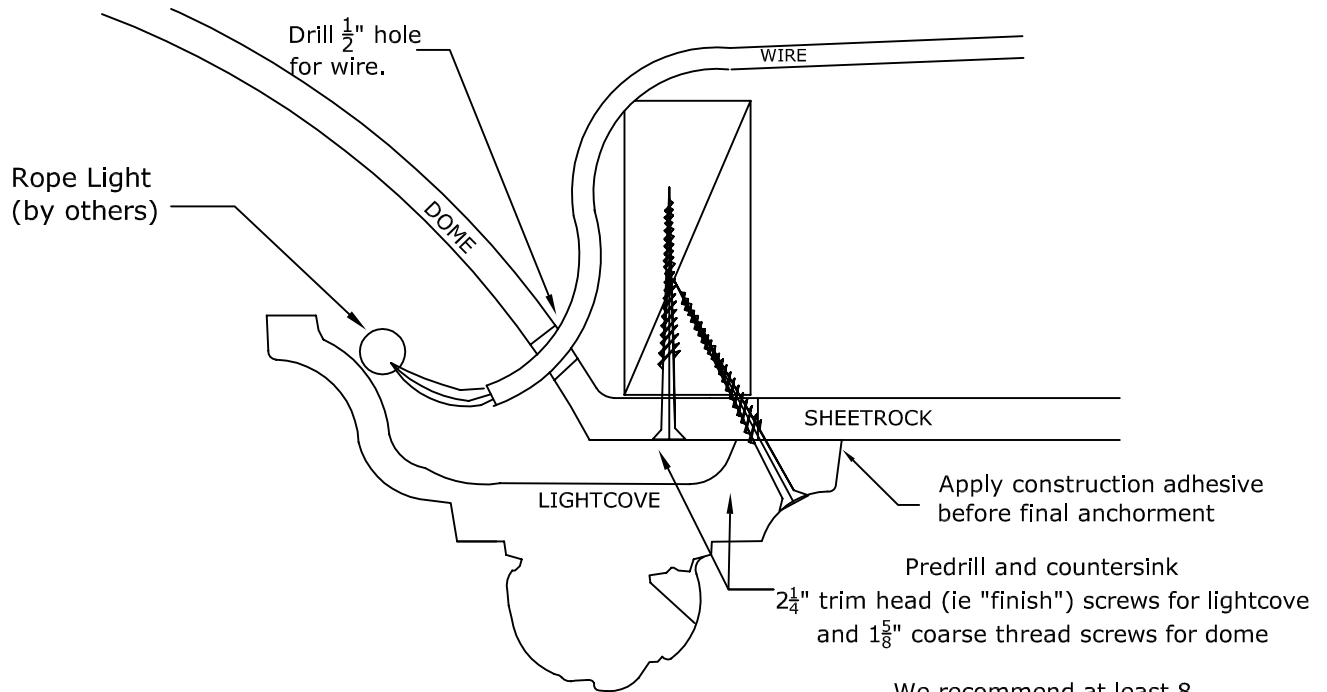

We recommend at least 8 points of anchor for the light cove (in addition to at least 8 points of anchor for the dome). Larger domes may have special framing suggestions.

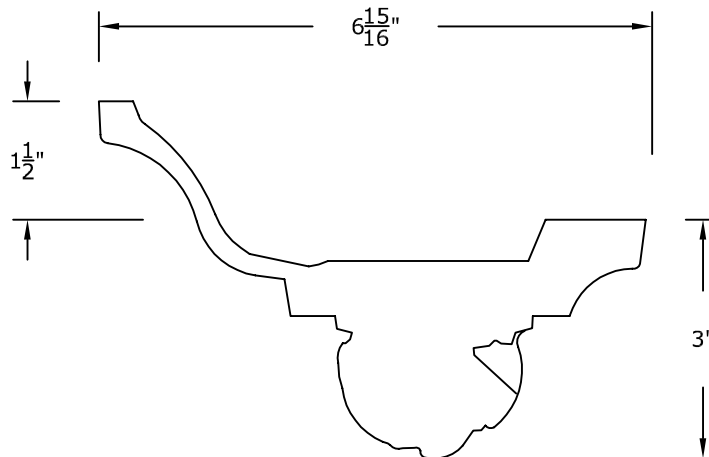

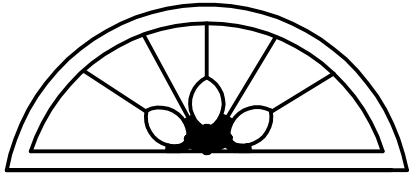

# RWM®


© Copyright 2017

## RWM Inc.


6419 South Cottonwood Street, Murray, Utah 84107  
Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)  
Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at [www.rwm-inc.com](http://www.rwm-inc.com)


## Standard Casing Options: For Select Domes

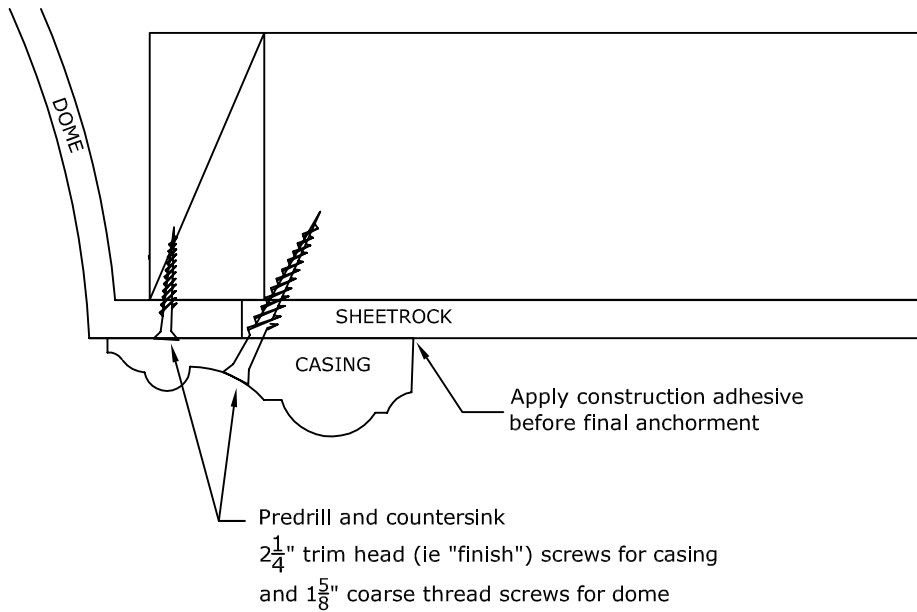


Option 1

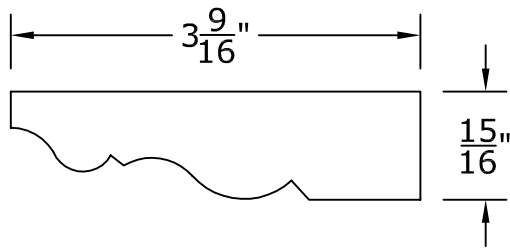

Option 3

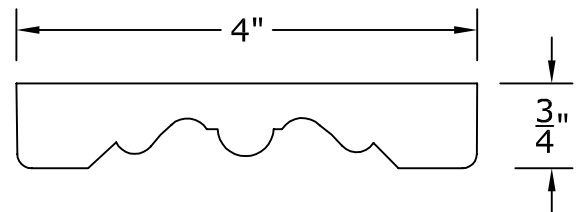

Option 2

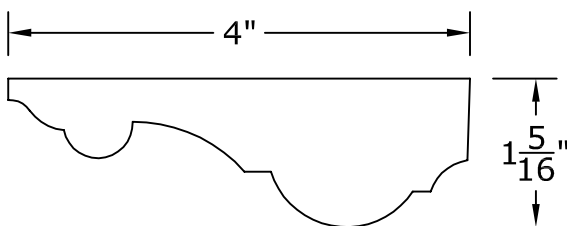

Option 4

