




© Copyright 2017

RWM Inc.

6419 South Cottonwood Street, Murray, Utah 84107
 Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)
 Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at www.rwm-inc.com

Special Lightcover: For Select 5' Domes

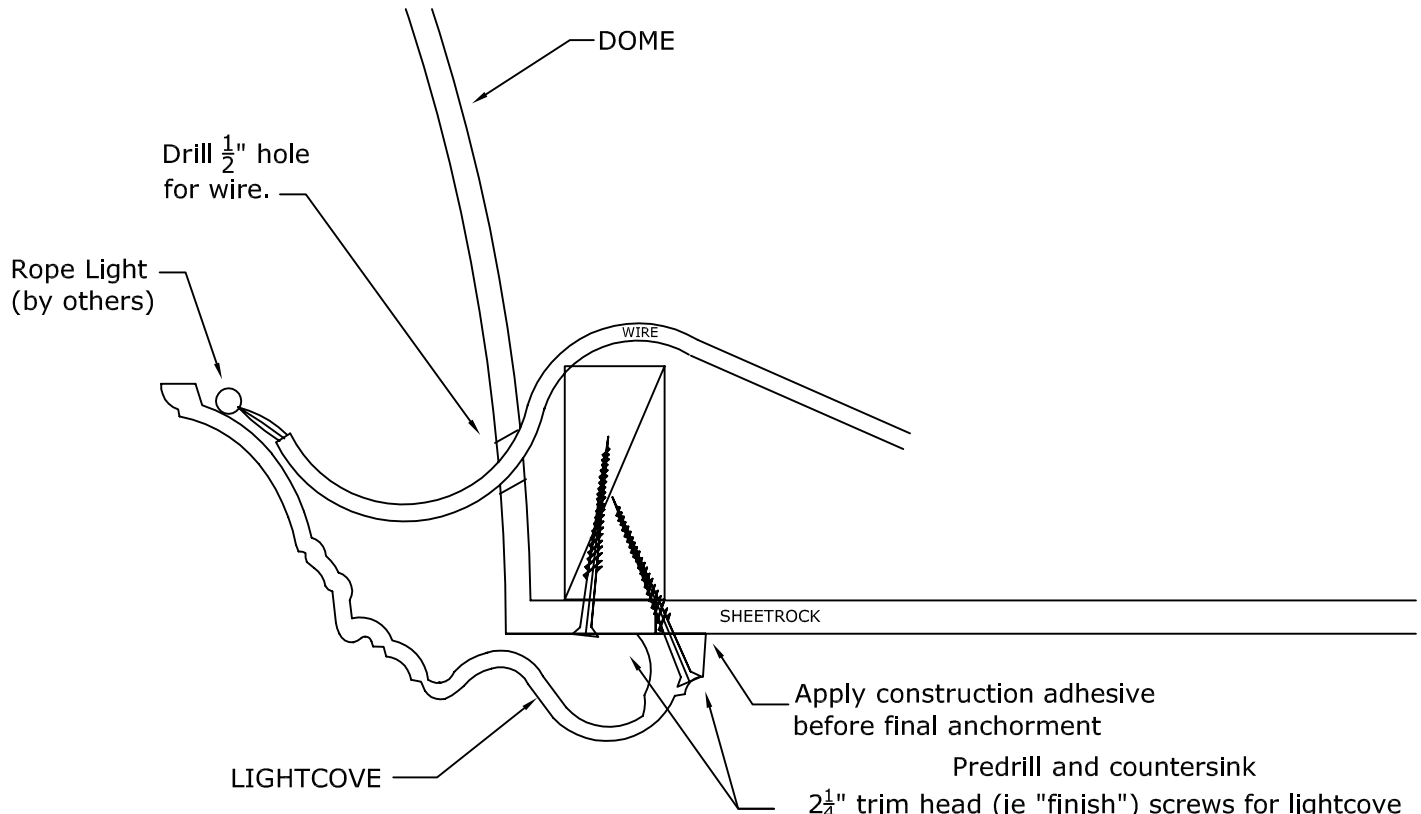

Apply construction adhesive before final anchoring

Predrill and countersink
 2 1/4" trim head (ie "finish") screws for lightcover
 and 1 5/8" coarse thread screws for dome

We recommend at least 8 points of anchor for the light cover (in addition to at least 8 points of anchor for the dome). Larger domes may have special framing suggestions.

