






© Copyright 2017

# RWM Inc.

6419 South Cottonwood Street, Murray, Utah 84107  
Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)  
Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at [www.rwm-inc.com](http://www.rwm-inc.com)

## 38" W x 14<sup>3</sup>/<sub>8</sub>" D Gothic Niche Cab

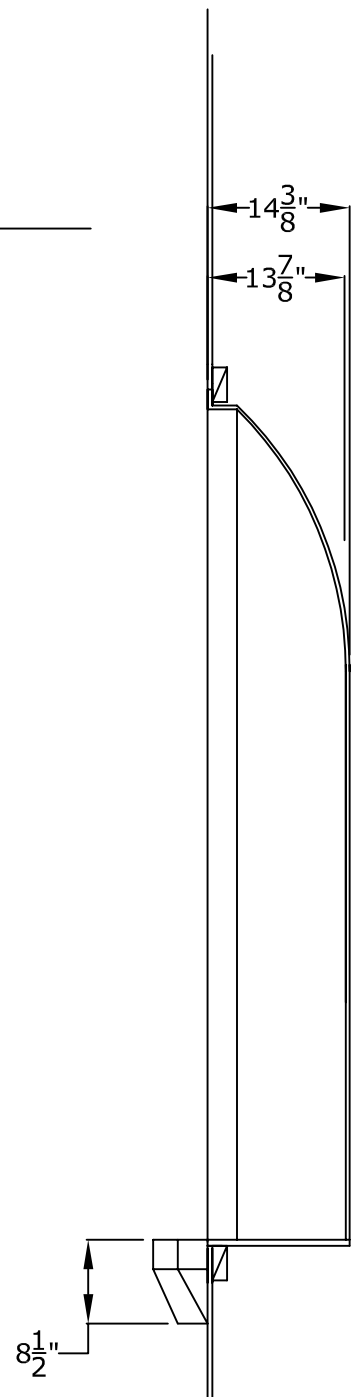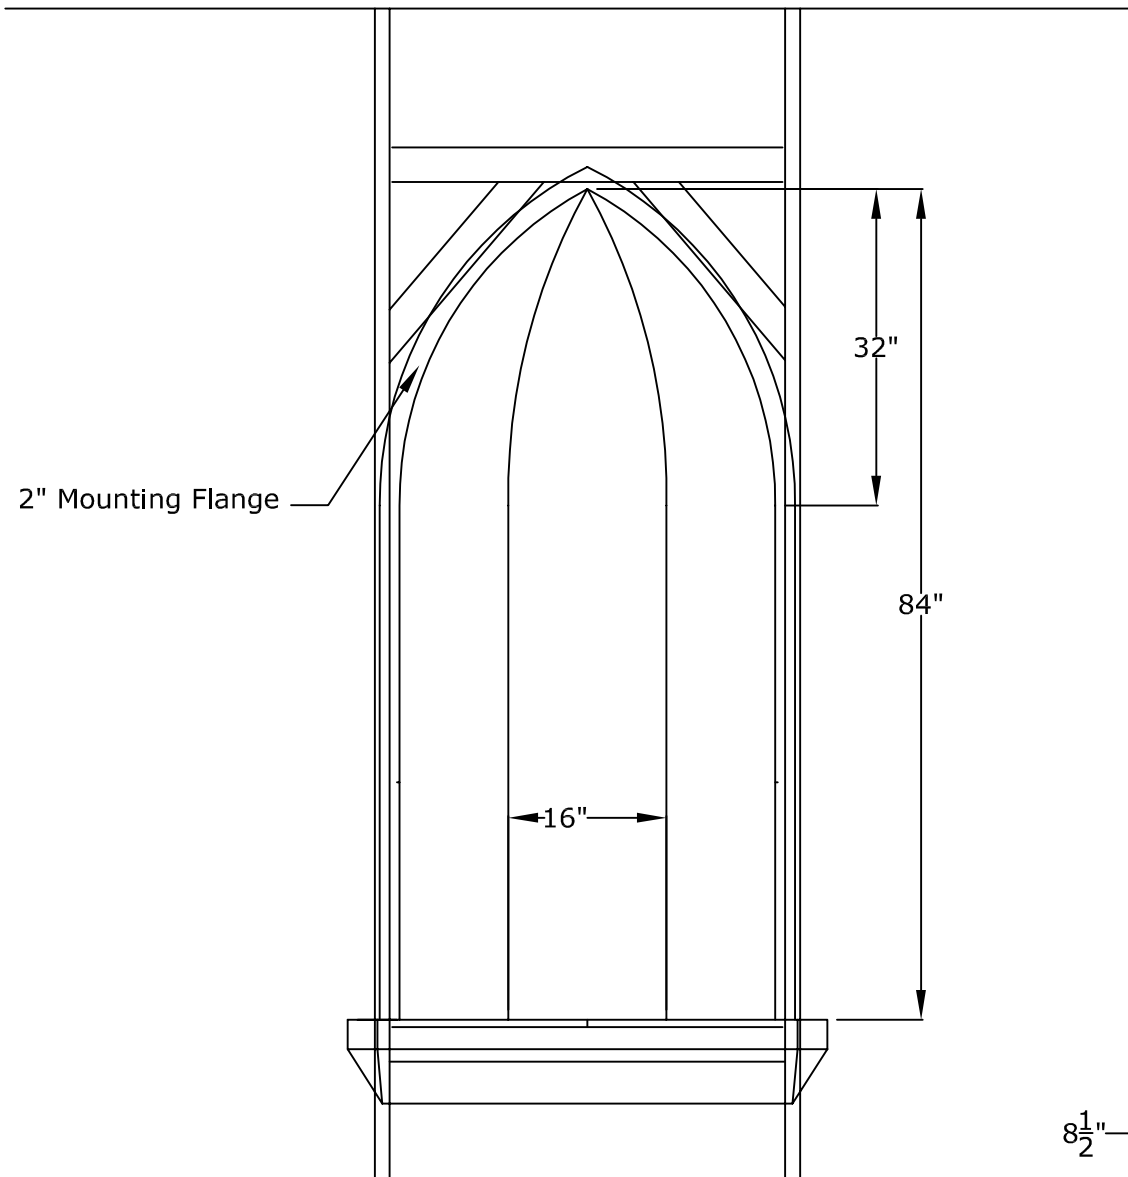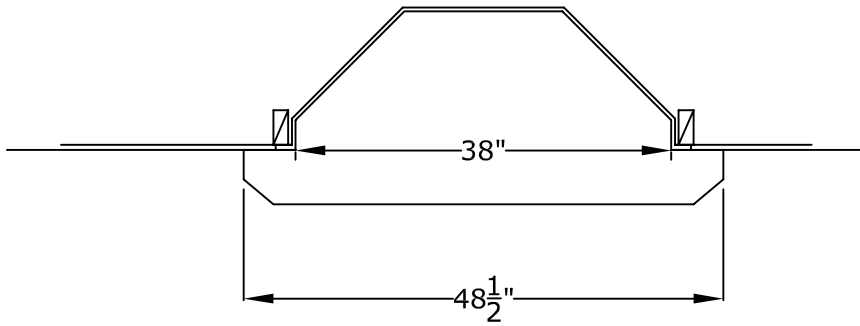




© Copyright 2017


## RWM Inc.

6419 South Cottonwood Street, Murray, Utah 84107  
Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)  
Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at [www.rwm-inc.com](http://www.rwm-inc.com)

### 38" W x 14<sup>3</sup>/<sub>8</sub>" D Gothic Niche Cab: Framing Detail

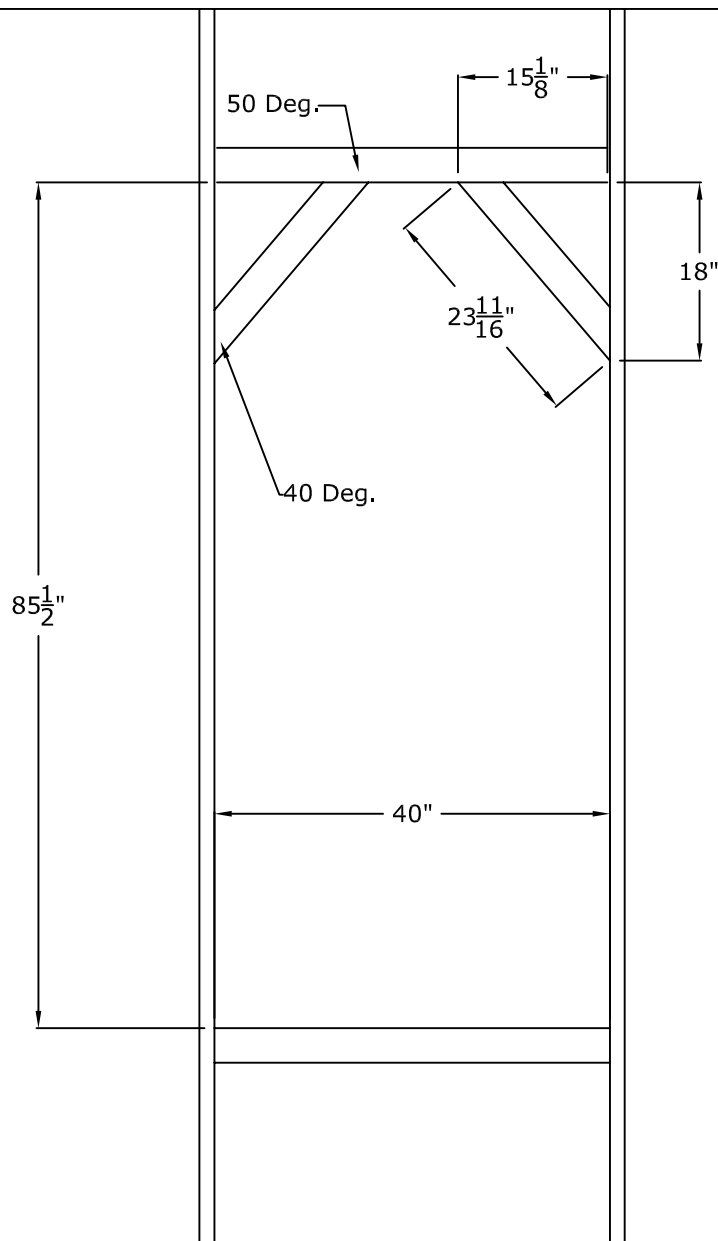

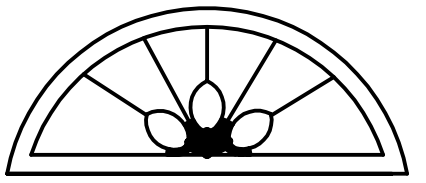

**RWM**®

© Copyright 2017

## RWM Inc.





6419 South Cottonwood Street, Murray, Utah 84107

Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)

Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at [www.rwm-inc.com](http://www.rwm-inc.com)

### 38" W x 14<sup>3</sup>/<sub>8</sub>" D Gothic Niche Cab: With Rope Column & Casings

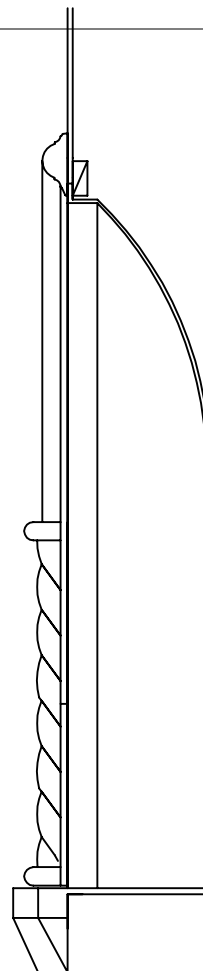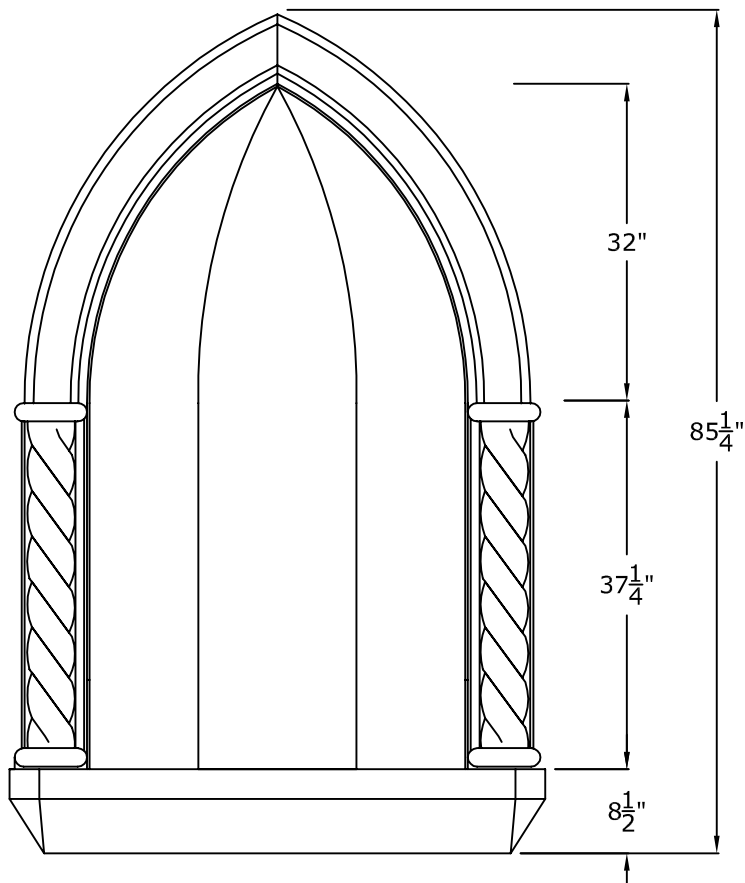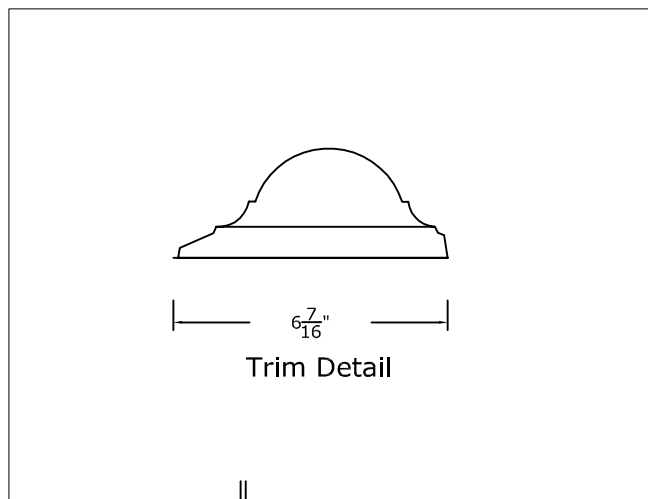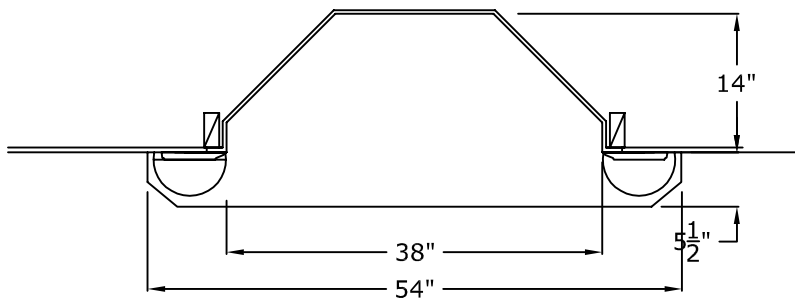



© Copyright 2017

## RWM Inc.

6419 South Cottonwood Street, Murray, Utah 84107  
Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)  
Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at [www.rwm-inc.com](http://www.rwm-inc.com)

### 38" W x 14<sup>3</sup>/<sub>8</sub>" D Gothic Niche Cab: With Casings

